




BY  IRONWOOD

HHW32/HHW39

HALF HEXAGON WORKSTATION

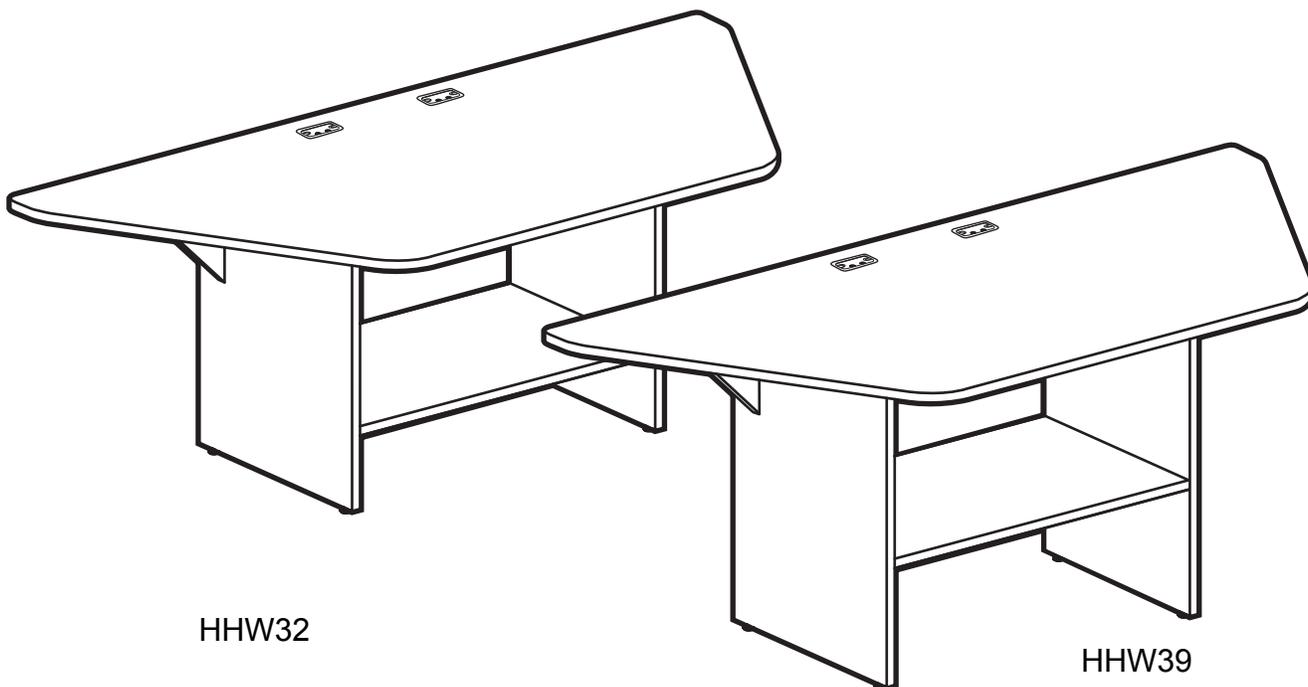

HHW32

HHW39

IMPORTANT!

Assembly may require the assistance of another person.

Before you begin assembly:

READ THE DIRECTIONS all the way through one time. This will speed up the process and help you understand the sequence of steps.

COUNT THE PARTS AND HARDWARE before assembly. This ensures you have received all necessary parts before you begin.


TOOLS: You may need a Phillips head screwdriver, a medium slotted screwdriver or a plastic mallet. To protect your new furniture from damage during assembly, it is recommended to work on a carpeted surface.

In the event any parts are missing from this package, send your name, address, telephone number, and a description of the missing part(s) to: PARTS, Box 1420, Missoula, MT 59806 or call: 1-800-769-5693 or FAX 1-800-445-5281.


CAUTION: On assemblies requiring glue, make sure the unit is assembled correctly before gluing. Once this unit is assembled with glue, the manufacturer will not be responsible for damaged parts. Keep a damp cloth or sponge handy to wipe off excess glue.

To care for this furniture, simply wipe with a cloth dampened with glass cleaner containing ammonia-D.

PARTS DIAGRAM

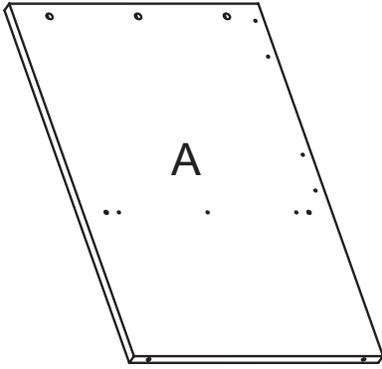


A

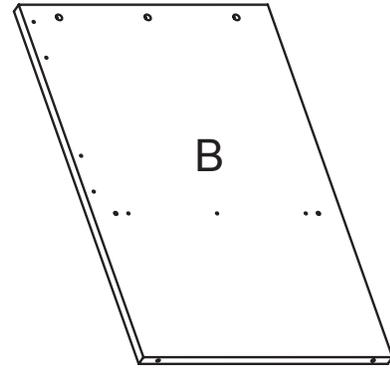

B

Leftside - HHW32	01070141	1 ea.
Leftside - HHW39	01070241	

Rightside - HHW32	01070141	1 ea.
Rightside - HHW39	01070241	

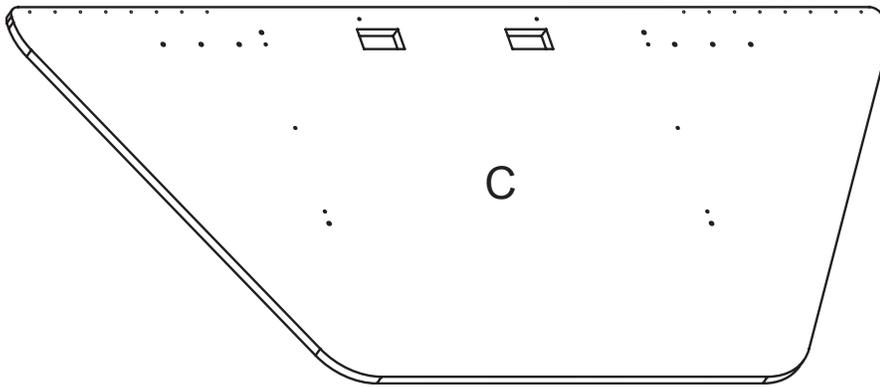


C

Top - HHW32	01070101	1 ea.
Top - HHW39	01070101	



D

Back - HHW32	01070152	2 ea.
Back - HHW39	01070152	

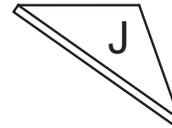

J

Brace - HHW32	01070198	2 ea.
Brace - HHW39	01070189	



G

Shelf - HHW32	01070127	1 ea.
Shelf - HHW39	01070127	

HARDWARE



H1	Minifix Bolt	909834	24 ea.
----	--------------	--------	--------



H2	Wood Dowel	195000	20 ea.
----	------------	--------	--------




H3	Minifix Cam	909810	24 ea.
----	-------------	--------	--------




H4	Leveler Insert	274650	4 ea.
----	----------------	--------	-------



H5	Leveler	300870	4 ea.
----	---------	--------	-------

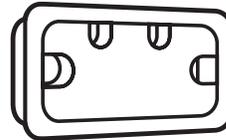

H6	Grommet Liner	286580	2 ea.
----	---------------	--------	-------




H7	Attachment Plate	411270	1 ea.
----	------------------	--------	-------



H8	#8 x .75" Panhead Screw	901208	16 ea.
----	----------------------------	--------	--------


Using the Minifix System:

Insert the Minifix Cams into the appropriate holes with the arrow facing outwards as shown.

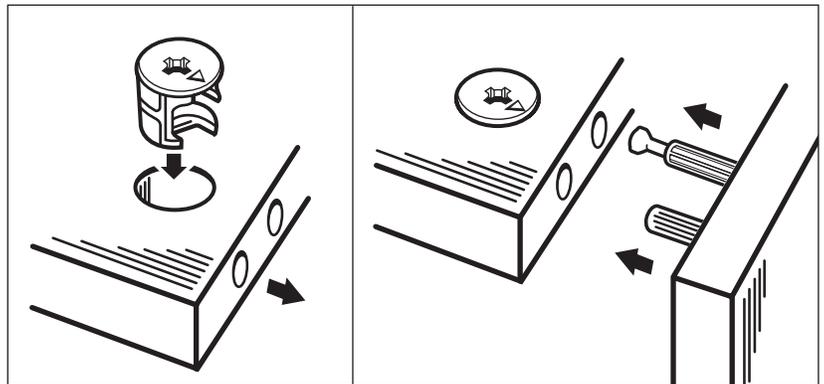

Using the #2 Phillips screwdriver, rotate the Cam Devices a half turn clockwise until snug.


To disassemble, turn the Cam Devices counter-clockwise and remove panels.

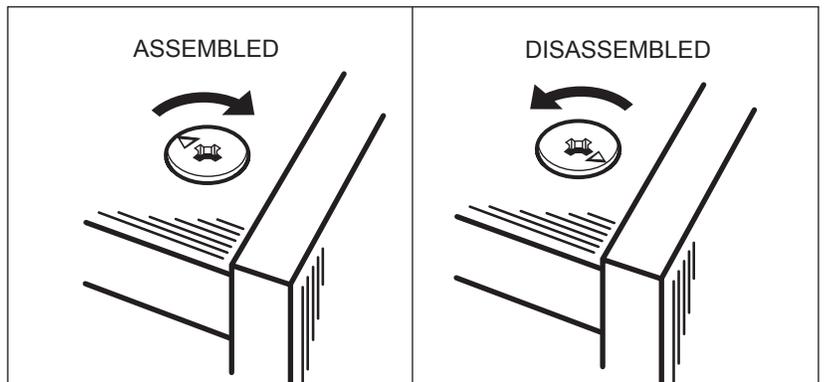

#1


Place the Top (C) on a clean, carpeted surface as shown. Screw eight Minifix Bolts (H1) into the Top where indicated.

Insert four Dowels (H2) into the pre-drilled holes of the Top where indicated.

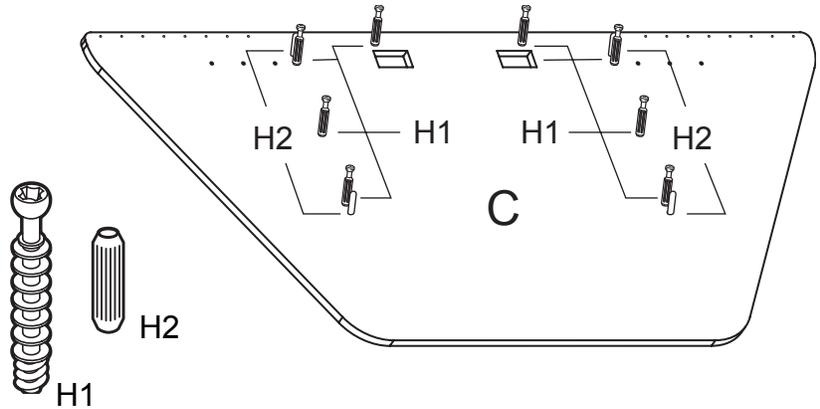

#2


Insert six Minifix Cams (H3) into each Back (D) with the arrows of the cams facing out.

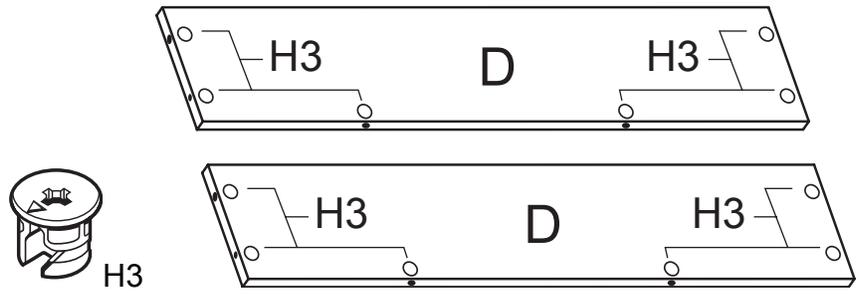

#3


Insert six Minifix Cams (H3) into the Shelf (G) with the arrows of the cams facing out.

Screw two Minifix Bolts (H1) into the other side of the Shelf where indicated.

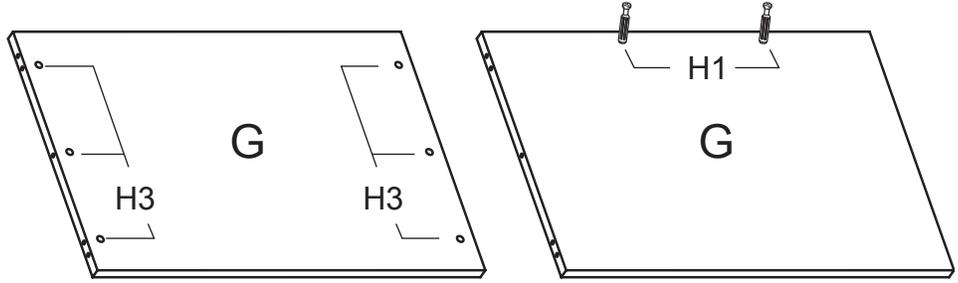


#4

Insert three Minifix Cams (H3) into the Left Side (A) and Right Side (B) where indicated with the arrows of the cams facing out.

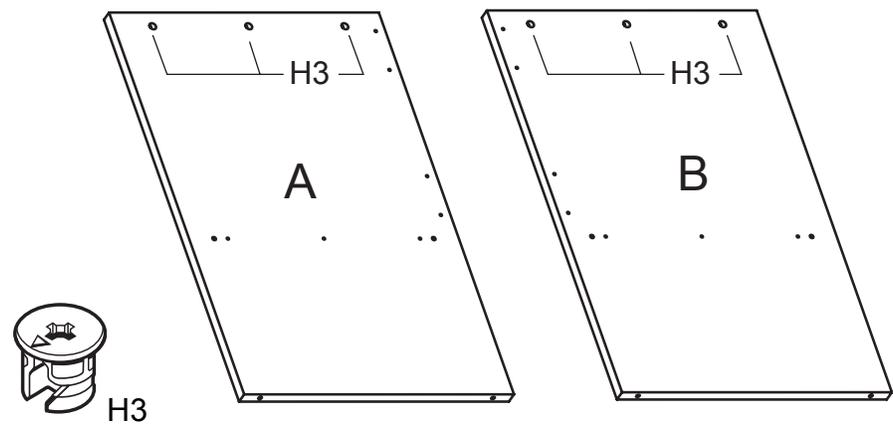

#5


Screw seven Minifix Bolts (H1) and insert two Dowels (H2) into each Side (A & B) where indicated.

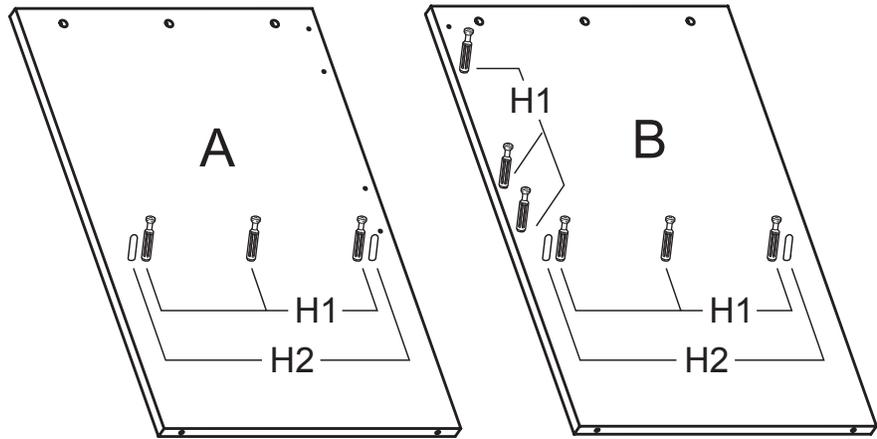

#6


Using a plastic mallet, tap Leveler Inserts (H4) until flush with the surface in the bottom edges of the Left Side (A) and Right Side (B) as shown. Screw the Levelers (H5) into the Leveler Inserts.

Adjust the Levelers after assembly is complete and the unit is in place.

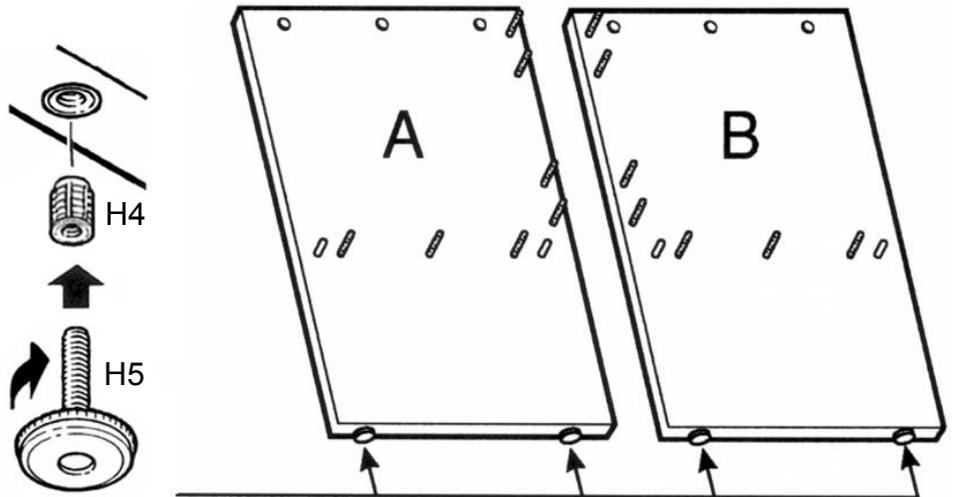


#7

Insert six Dowels (H2) into the indicated holes of each Brace (J) as shown.

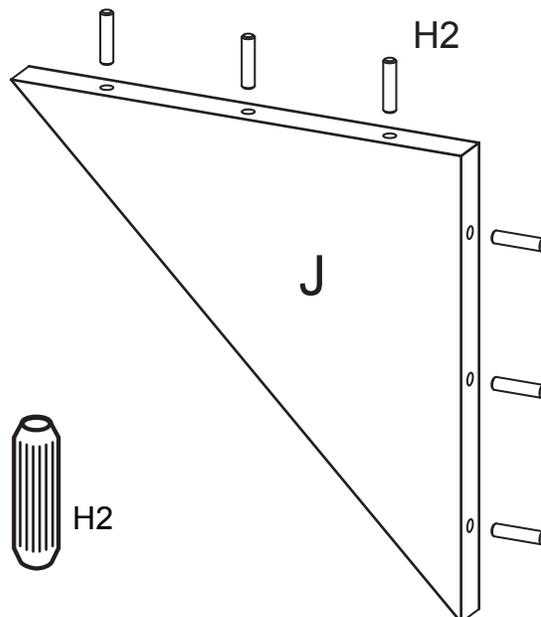


#8

Position a Back (D) onto the Shelf (G) as shown. Rotate the arrows of the Minifix Cams (H3) of the Back clockwise to secure in place as shown.

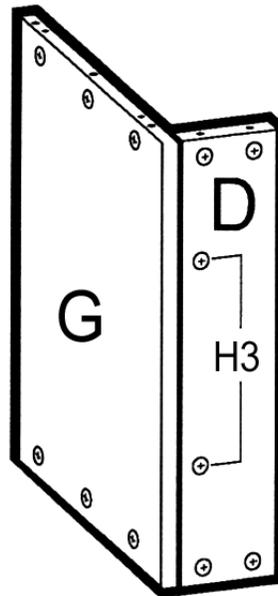


#9

Position the assembly and the other Back (D) onto the corresponding bolts of the Left Side (A) as shown. Rotate the arrows of the Minifix Cams (H3) of the Shelf (G) and the Backs clockwise to secure in place.

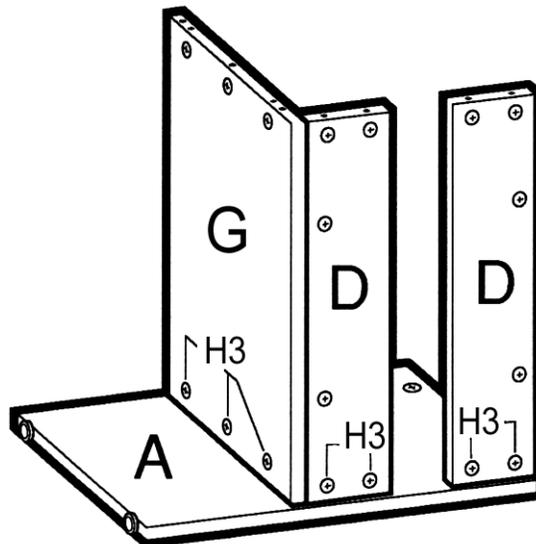


#10

Position the Right Side (B) onto the assembly as shown. Turn the arrows of the Minifix Cams (H3) of the Shelf (G) and Backs (D) clockwise to secure in place.

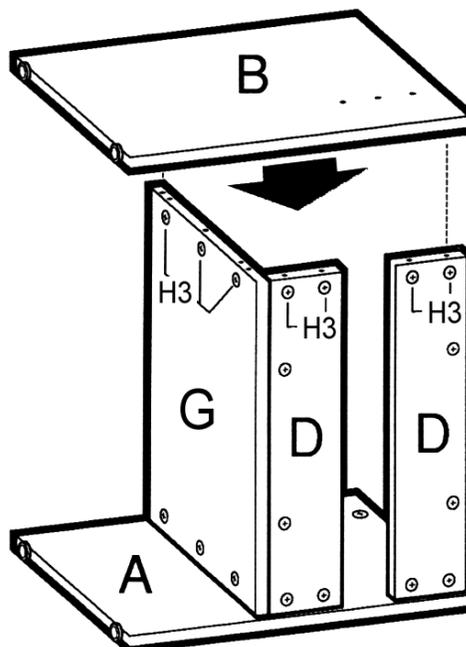


#11

With the assistance of another person, turn the assembly upright. Press a Brace (J) into the pre-drilled holes of the Left Side (A) and Right Side (B) as shown until firmly seated in place.

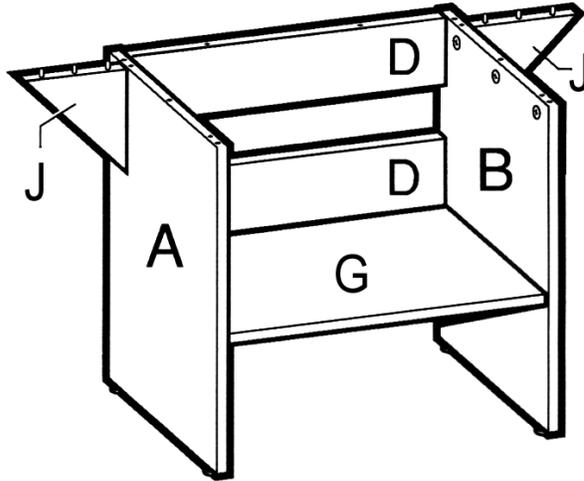


#12

Position the Top (C) onto the Left Side (A), Right Side (B), and the upper Back (D) as shown. Turn the arrows of the Minifix Cams (H3) clockwise to secure in place.

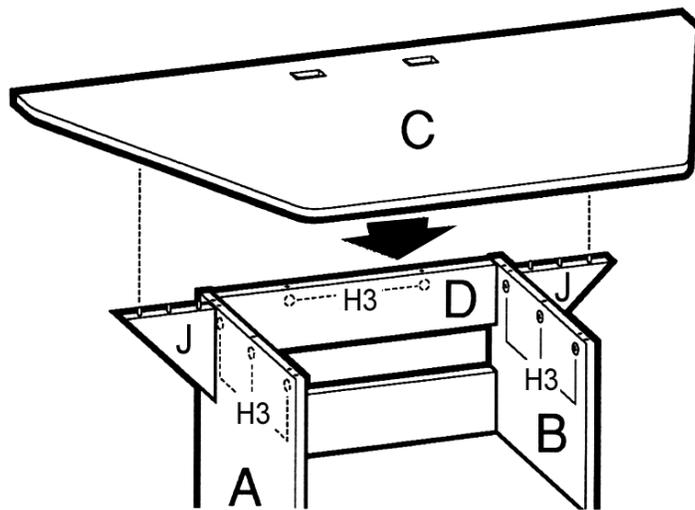

#13


Insert the Grommets (H6) into the Top (C) and the Shelf (G).

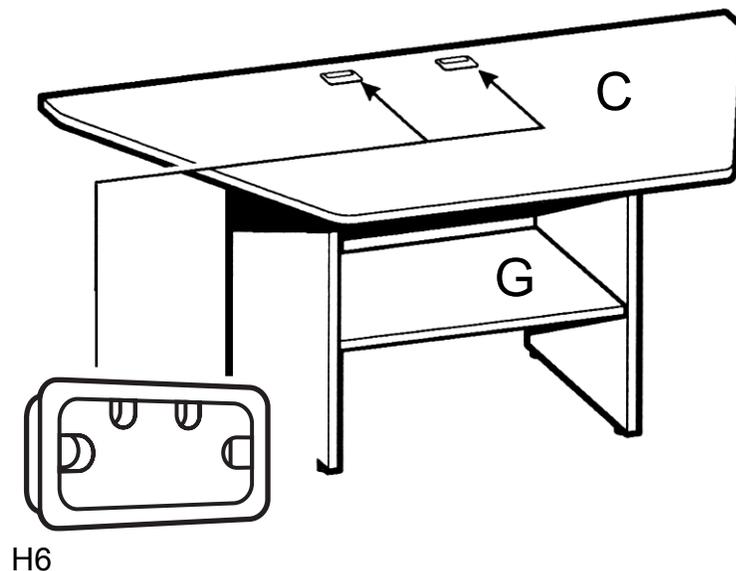


Your Glacier Half Hexagon Workstation is now fully assembled and ready for use.

CONNECTING TWO HHW UNITS TOGETHER

1. Position the two Workstations with the long edges of the tops together.

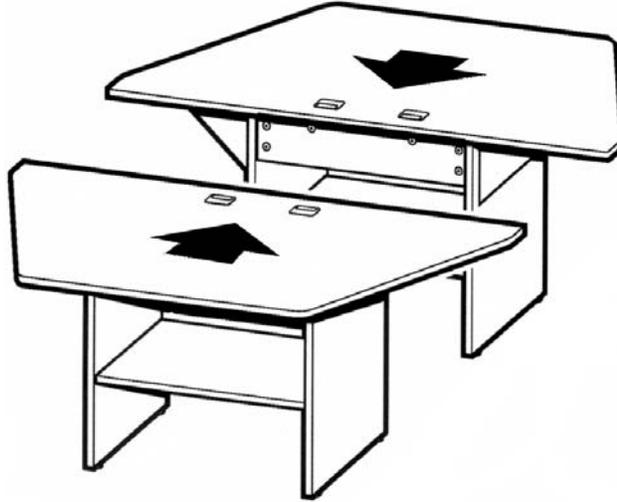

2. Align the tops together. Adjust the Levelers (H5) to level both Workstations at the same height.

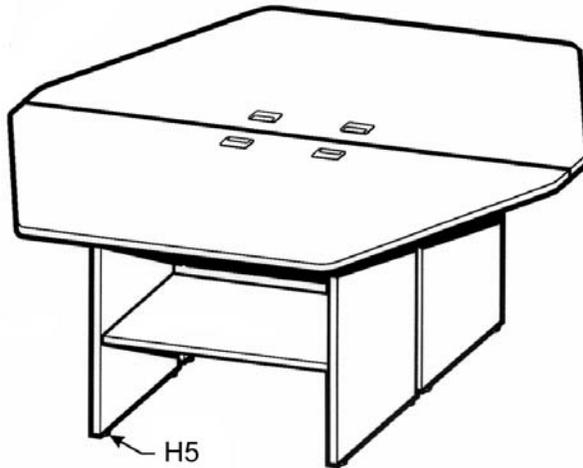

3. Attach two Attachment Plates (H7) to the undersides of each Top (C) using #8x5/8" Panhead Screws (H8) in the pre-drilled holes as shown.

Do not fully tighten these screws yet!

4. When both Attachment Plates are installed and the units are aligned and level, tighten all the #8x5/8" Panhead Screws (H8).

