




BY  IRONWOOD

LFBK6

6-SHELF BOOK TRUCK

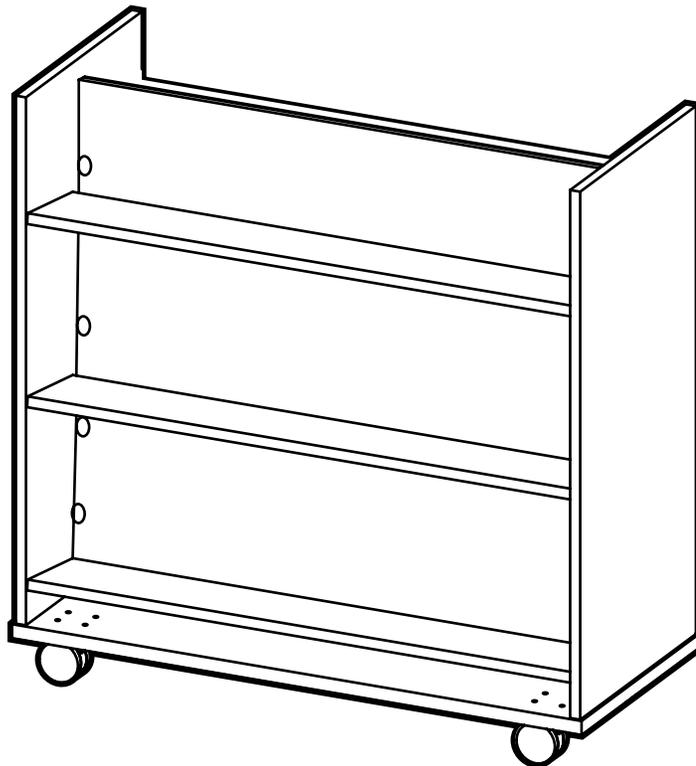

IMPORTANT!

Before you begin assembly, read the directions all the way through one time. Assembly may require the assistance of another person.

This will speed up the process for you and you will understand the sequence of steps. You will need #2 and #3 Phillips head screwdrivers, a medium slotted screwdriver, a plastic mallet and a clean, carpeted surface to work on. If carpet is not available, use the foam padding provided in the carton. It will be helpful to count out and separate hardware into groups before assembly.


In the event any parts are missing from this package, send your name, address, telephone number, and a description of the missing part(s) to:

PARTS

**Box 1420, Missoula, MT 59806 or call:
1-800-769-5693 or FAX 1-800-445-5281.**

To care for this furniture, simply wipe with a cloth dampened with a glass cleaner containing ammonia-D.

PARTS DIAGRAM

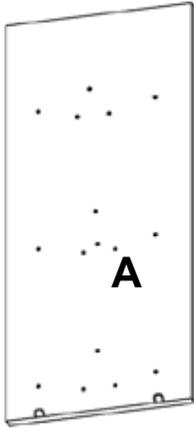


A

Left Side	01050241	1 ea.
-----------	----------	-------




B

Right Side	01050241	1 ea.
------------	----------	-------

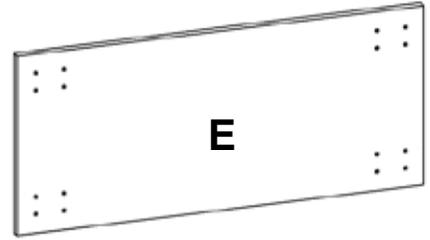


E

Bottom	01050212	1 ea.
--------	----------	-------

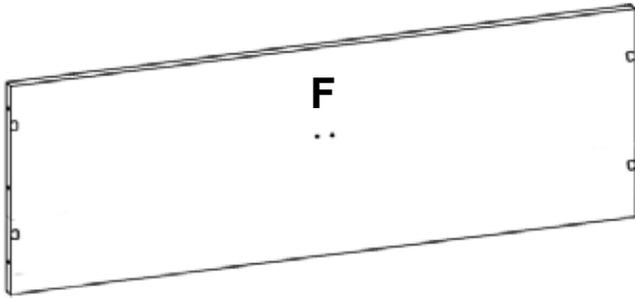


F

Shelf Back Upper	01050211	1 ea.
------------------	----------	-------

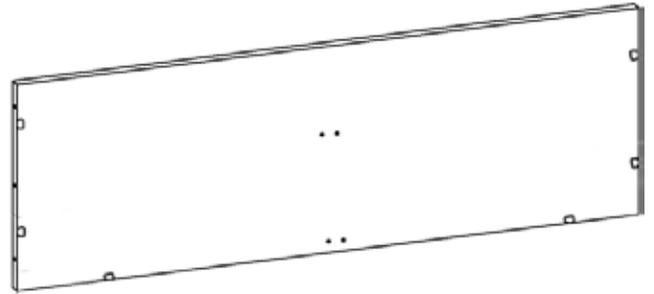

G

Shelf Back Lower	01050211	1 ea.
------------------	----------	-------

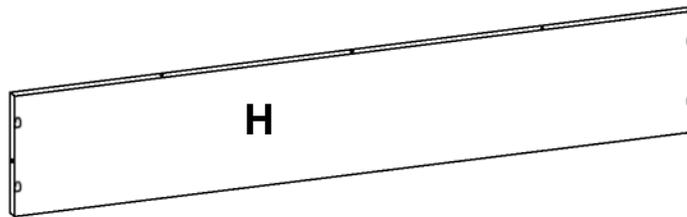

H

Shelf Bottom	01050227	6 ea.
--------------	----------	-------

HARDWARE




H1	Rafix Bolt	909925	38 ea.
----	------------	--------	--------



H2	Rafix Flush Cam	909834	10 ea.
----	-----------------	--------	--------



H3	Rafix Cam	909909	28 ea.
----	-----------	--------	--------



H4	Angle Bracket	401170	6 ea.
----	---------------	--------	-------




H7	Carriage Bolt	902205	16 ea.
----	---------------	--------	--------



H8	Nylok Nut	904420	16 ea.
----	-----------	--------	--------



H6	Varianta Screw	988060	12 ea.
----	----------------	--------	--------

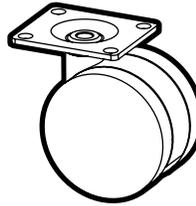



H5	Swivel Caster	402640	4 ea.
----	---------------	--------	-------

Using the Rafix System:


Insert the Rafix Cams into the appropriate holes. The flat edge of the cam should be facing the edge of the panel.

Slide Rafix Cams of the panel to be attached onto the corresponding posts.

When screwing post into hole, **Do Not** over tighten. Screw post down until bottom face of post flange just touches board surface.

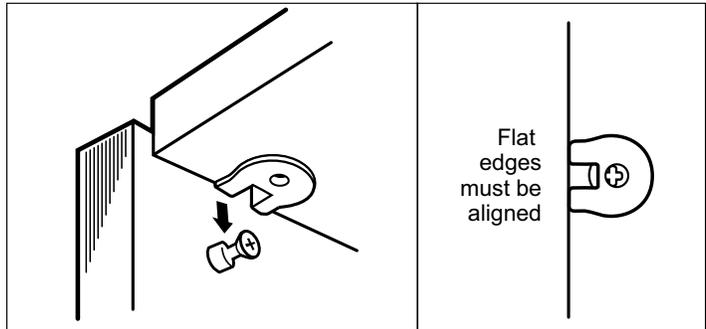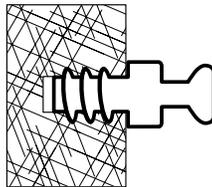


Using a #3 Phillips screwdriver, turn the rotating portion of the Rafix Cam a 1/2 turn clockwise to secure. **IMPORTANT!** Do not exceed 1/2 turn when tightening cams. Turn 1/2 turn counterclockwise to disassemble and remove panel.

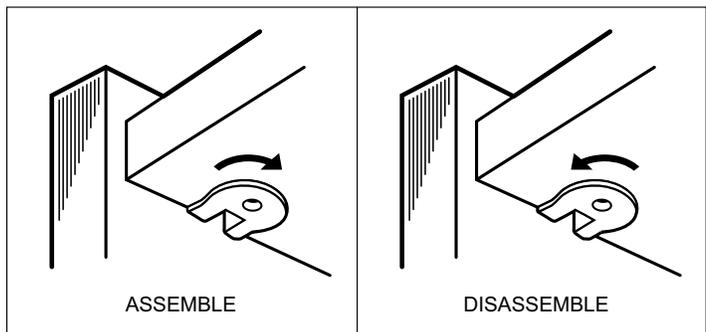

#1


Place Bottom (E) on a clean, carpeted surface. Attach four Casters (H5) using four Carriage Bolts (H7) and four Nylok Nuts (H8) each as shown.

Flip over the bottom assembly and insert 6 rafx bolts into the remaining holes.

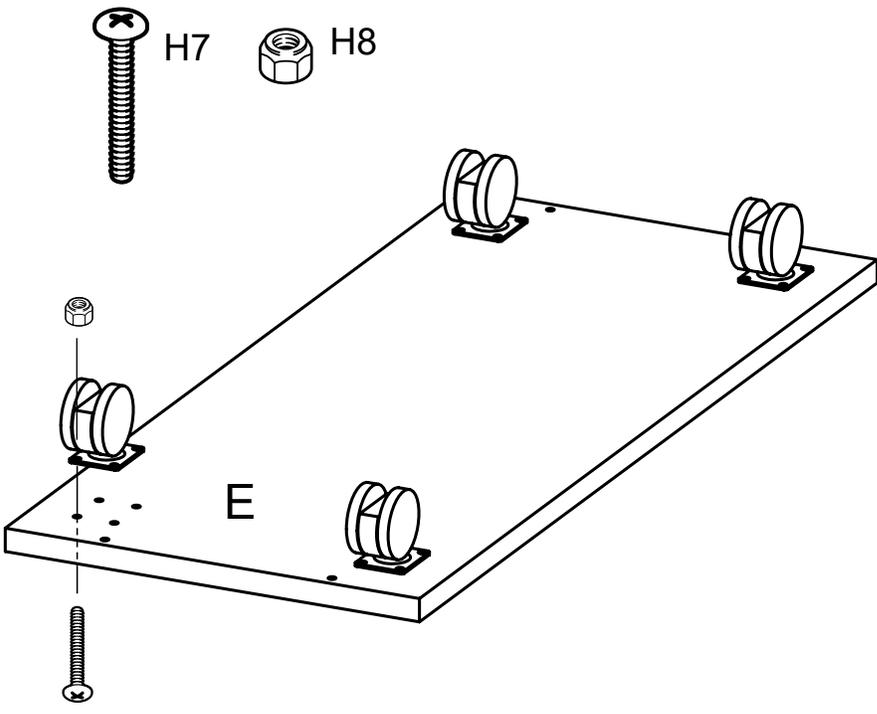


#2

Place left side (A) on it's side and insert 16 rafx bolts (H1) and 2 flush rafx cams (H2) where indicated.

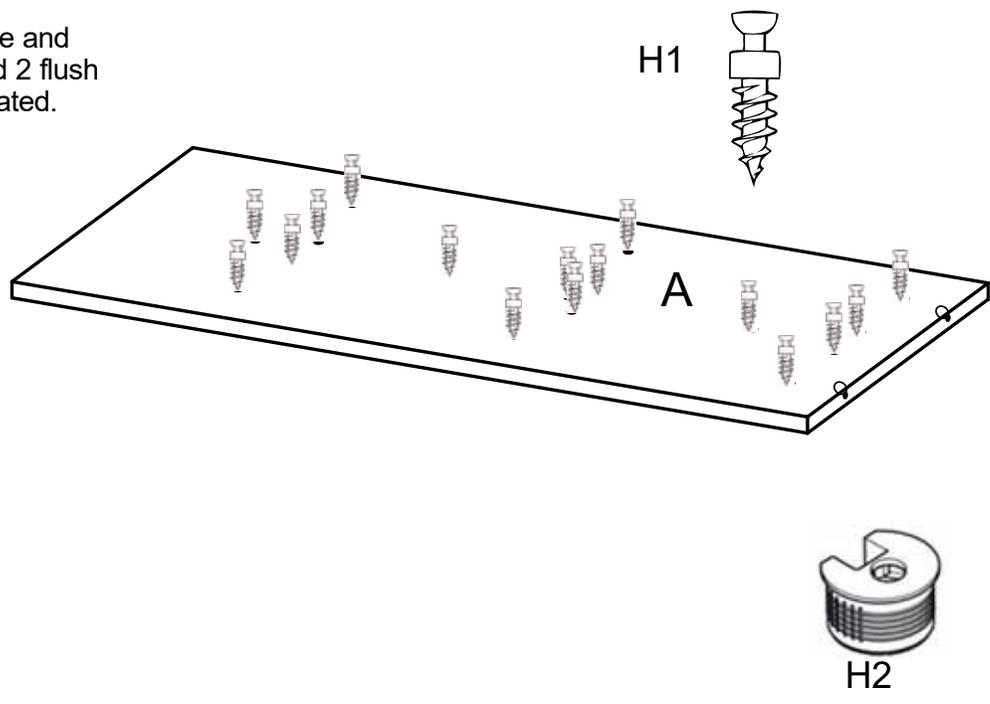


#3

Take side panel (A) and place on top of rafix bolts on bottom panel (E).
Turn rafix cams to tighten.

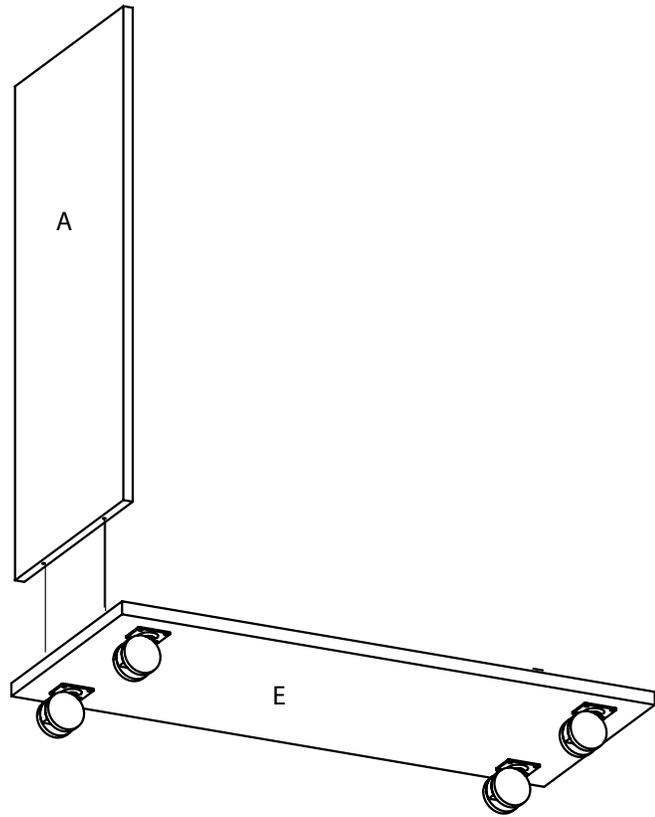


#4

Insert 6 flush rafix cams (H2) into back panel lower (F). Take back panel lower (F) and attach it to side panel (A) and bottom panel (E) by placing the panel on the rafix bolts. Turn the rafix cams to tighten.

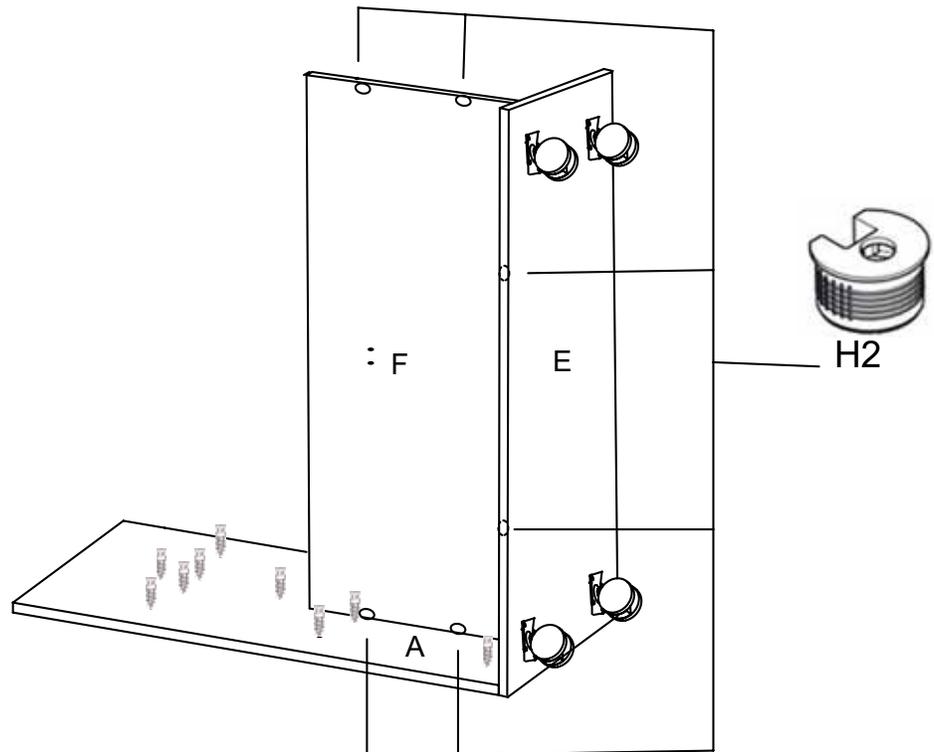

#6

Insert 4 rafx cams
(H3) into each shelf
(H)

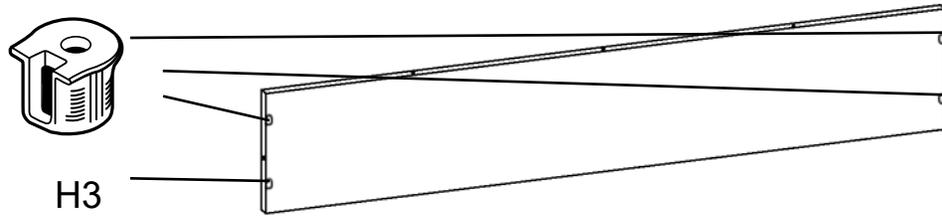

#7

With the assistance of
another person, turn
the unit upright and
place the 6 shelves
onto the rafx bolts.
Turn rafx cams (H3) to
tighten.

Your Six-Shelf Book
Cart is completely
assembled and ready
for use

