




MODULAR SERIES 2400/3000

CPUC

CPU CART

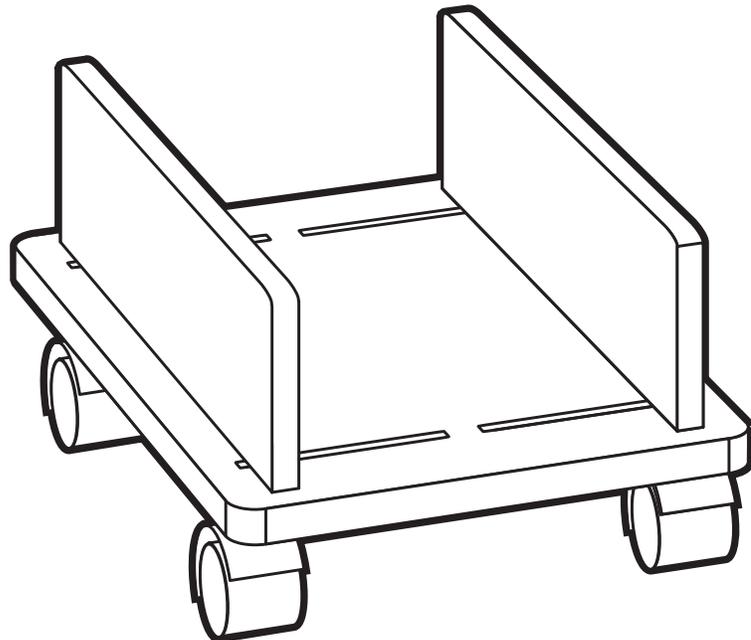

IMPORTANT!

Assembly may require the assistance of another person.

Before you begin assembly:

READ THE DIRECTIONS all the way through one time. This will speed up the process and help you understand the sequence of steps.

COUNT THE PARTS AND HARDWARE before assembly. This ensures you have received all necessary parts before you begin.


TOOLS: You may need a Phillips head screwdriver, a medium slotted screwdriver or a plastic mallet. To protect your new furniture from damage during assembly, it is recommended to work on a carpeted surface.

In the event any parts are missing from this package, send your name, address, telephone number, and a description of the missing part(s) to: PARTS, Box 1420, Missoula, MT 59806 or call: 1-800-769-5693 or FAX 1-800-445-5281.


CAUTION: On assemblies requiring glue, make sure the unit is assembled correctly before gluing. Once this unit is assembled with glue, the manufacturer will not be responsible for damaged parts. Keep a damp cloth or sponge handy to wipe off excess glue.

To care for this furniture, simply wipe with a cloth dampened with glass cleaner containing ammonia-D.


PARTS DIAGRAM

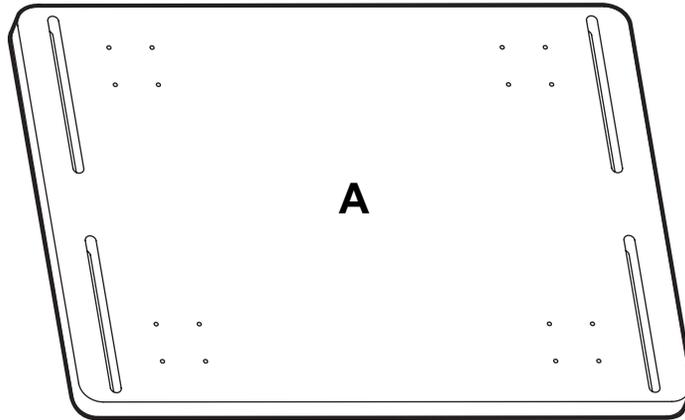

Bottom Panel	02260111	1 ea.
--------------	----------	-------

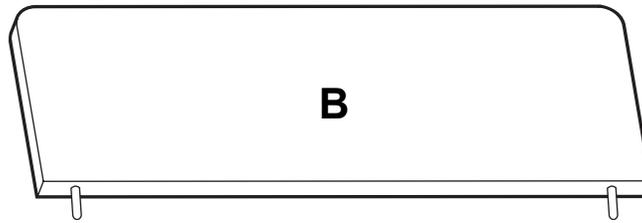


Side Panel	02260141	2 ea.
------------	----------	-------

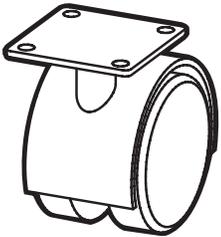

H1	Plate Caster	402050	4 ea.
----	--------------	--------	-------



H2	#8 x 5/8" Panhead Screw	988056	16 ea.
----	----------------------------	--------	--------




H3	Fender Washer	904409	4 ea.
----	---------------	--------	-------



H4	Plastic Wing Nut	904450	4 ea.
----	------------------	--------	-------


#1

Place the Bottom Panel (A) on a clean, carpeted surface with the pre-drilled holes facing up. Attach four Plate Casters (H1) to the underside of the Bottom Panel using the #8 x 5/8" Panhead Screws (H2) in the pre-drilled holes as shown.

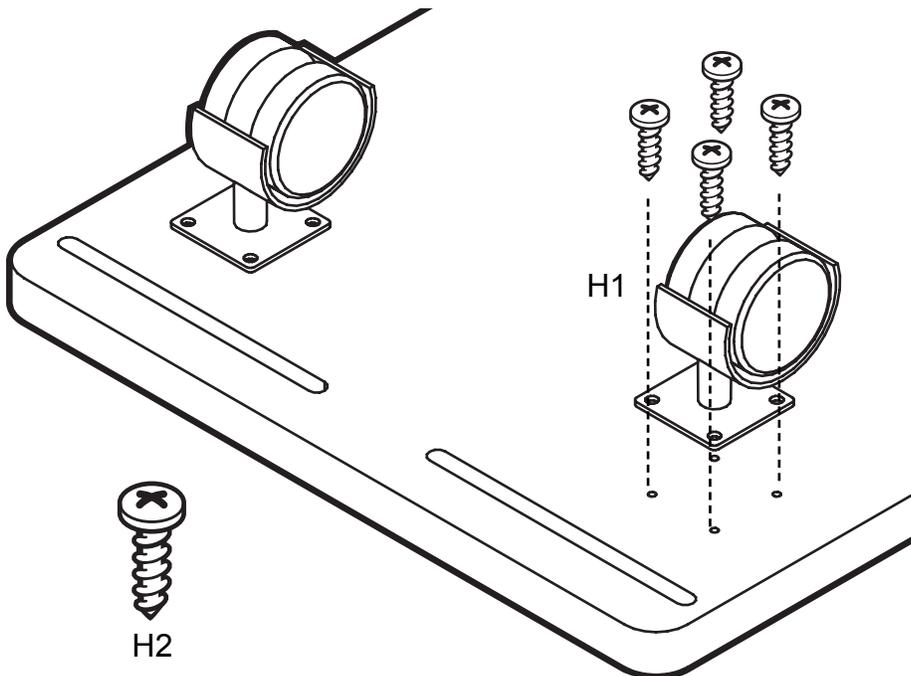


#2

Place a Side Panel (B) onto the Bottom Panel (A) with the bolts of the Side Panel inserted through the slots in the Bottom Panel.

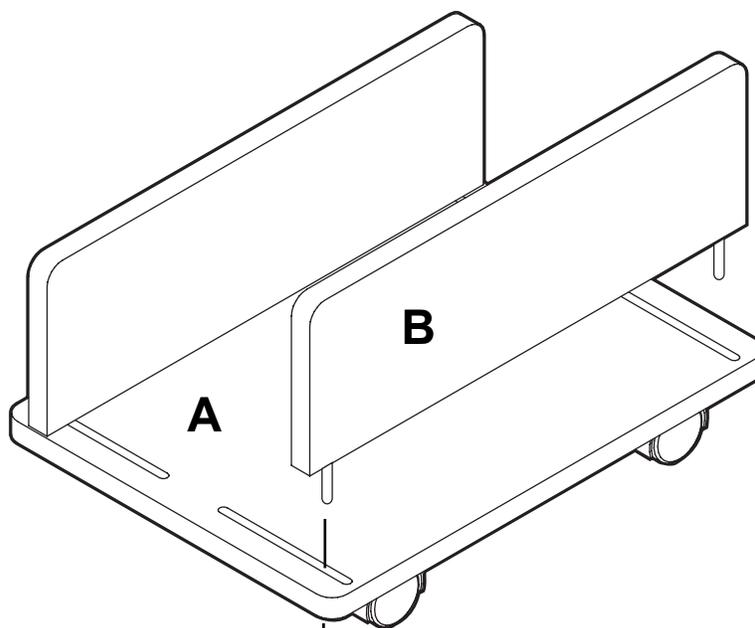

#3


Place Fender Washers (H3) and Plastic Wing Nuts (H4) onto the bolts of the Side Panel. Turn the Plastic Wing Nuts to secure the Side Panel to the Bottom Panel.

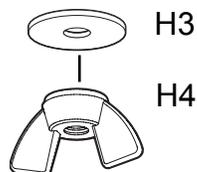

NOTE: Do not over tighten wing nuts.

#4

Attach the other Side Panel (B) to the Bottom Panel (A) using the Fender Washers (H3) and Plastic Wing Nuts (H4).

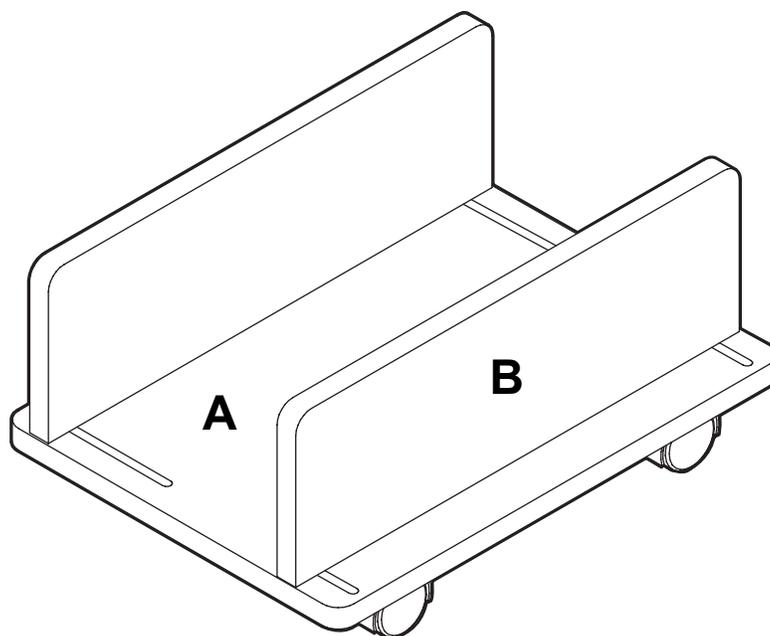

#5

Loosen the Plastic Wing Nuts slightly. Place your CPU onto the Bottom Panel. Center the CPU on the Bottom Panel and slide the Side Panels against the CPU sides. Retighten all the Plastic Wing Nuts.

Assembly is now complete.

